


**MINI HAND HELD TYPE
UHF TRANSCEIVER**

user's manual

MODEL : EH-465 Digital

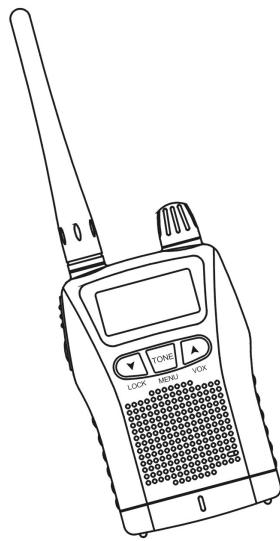

CONTENTS

INTRODUCTION	4
GENERAL FEATURES	4
DESCRIPTION OF FEATURES	5
1. Top Panel Features	5
2. Side and Back Panel Features	6
3. Bottom side Features	8
4. Display Panel Features	9
5. Front Panel Features	11
FRS CHANNEL FREQUENCY TABLE	14
CTCSS	14
OPTION SETTING MODE	16
BATTERY INSTALLATION ISTRUCTIONS	19
TO RECEIVE	20
TO TRANSMIT	20
INITIALIZATION	21
RANGE	21
EASY AND COMMUNICATIONS	21
SPECIFICATION	22
TROUBLESHOOTING	23

INTRODUCTION


Congratulations on your purchase of the maycom EH-465 Digital Advanced Family Radio Service (FRS) Portable radio. Your maycom radio is designed to provide trouble-free service and advanced user features to make it the premier choice in radio communications.

GENERAL FEATURES

- Compact size and light weight
- Easy viewing multi-purpose LCD display
- CPU controlled frequency synthesizer for reliable operation
- CTCSS Tone Squelch system to avoid interference
- Advanced user features – VOX, Scan, Call Tones, Melody Call and Roger Beep
- Operates on 4 AAA alkaline batteries, Ni-Mh Rechargeable Battery or DC Power Supply
- Connections for optional accessories to enhance your communication pleasure
- Belt Clip and hand strap for easy carrying

DESCRIPTION OF FEATURES

1. Top Panel Features

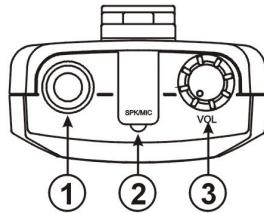

1) Antenna

The antenna is an integral part of FRS radio for maximum performance. Do not modify or connect any external device to antenna to change its characteristics.


2) Microphone and Speaker Jack

Jacks are provided for connection of optional speaker/microphone maycom accessories.

3) Power On/Off, Volume Control

Turn the volume control clockwise to switch power on and set volume to desired level. Turn the volume control counter-clockwise to turn power off.

2. Side and Back Panel Features

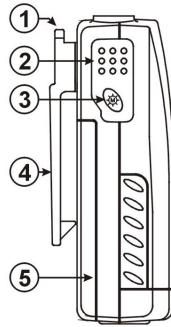

1) Flexible Wrist Strap

Placing the strap around the wrist will prevent the radio from falling to the ground(Strap is in accessory pouch).

2) PTT(Push-To-Talk) Button

Press the "PTT" button to activate the transmitter. Talk in a normal voice about 2-3 inches from the front panel. When external microphone is connected, the external PTT control is activated. To receive, just release "PTT" button.

3) Lamp button

- Press the lamp * button. The lamp will stay on 4 seconds.

• Monitor

Press Lamp button for 2 sec in receiving mode, both carrier and tone squelch circuit will be temporarily disabled. Receiver/audio will sound on the loudspeaker until the "Lamp" button is released.

• Bell Feature

Function : The user is alerted to incoming calls by bell indicator and an audible tone from the radio.

To Activate : ① Turn the power off
② Press the lamp button and then turn the power on
③ The Bell icon “  ” will appear on the LCD.

Upon receiving an incoming call, the alert function will be activated for about 8 seconds and then stopped for 15 trigger the alert device. The radio will automatically re-armed and ready for another alert after the 15 seconds timer expires.

To De-Activate : Turn the power off and on or press the “PTT” button. The Bell icon “  ” will disappear from the LCD.


4) Belt Clip

Allows for easy of carrying while attached to user's belt.

5) Battery Case

See “Battery Installation Instruction” for details.

3. Bottom side Features

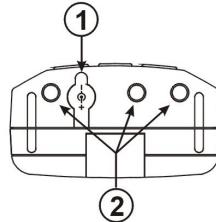


1) DC Jack

For connection to AC Wall Charger.
Do not connect charger to the radio if you are using alkaline Batteries.
Do not power on when you use the AC Wall Charger.

2) Bottom Charger contact for Desktop Charger

To charge the rechargeable battery pack with desktop charger , this contact point will be used.


4. Display panel features

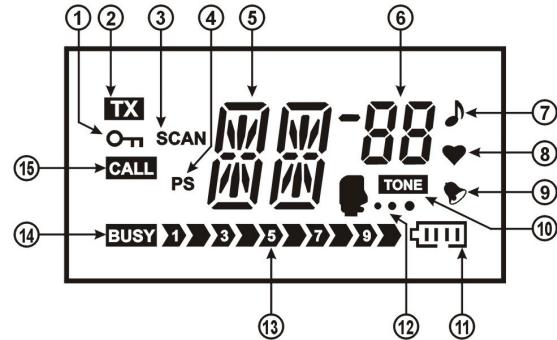

- 1) **On** : Indicates the "Key lock" feature has been activated.
- 2) **TX** : Indicates that radio is the "Transmit" mode.
- 3) **SCAN** : Indicates the "SCAN" feature has been activated.
- 4) **PS** : Indicates that the radio is in the "Battery save" mode.
- 5) **-88** : Displays the channel number in which the radio is operating on.
- 6) **88** : Displays the CTCSS tone number in which the radio is operating on.
- 7) **♪** : Indicates that "Beep" tone confirmation is on.
- 8) **♥** : Indicates that "Roger Beep" tone confirmation is on.
- 9) **钤** : Indicates that "Bell" feature has been activated.
- 10) **TONE** : Indicates "TONE" is on.
- 11) **■■■** : Indicates the amount of battery power left. If the battery level is too low, "■■■" will be flashing.
- 12) **■...■** : Indicates the "VOX" feature has been activated.

- 13)  : When transmitting, 10 segments will appear on the LCD. “ TX ” icon will also appear, at the top left corner of the LCD.
- 14) **BUSY** : Indicates that RF signal is being received.
- 15) **CALL** : Indicates that a correct call is received in the CTCSS option mode.

5. Front Panel Features

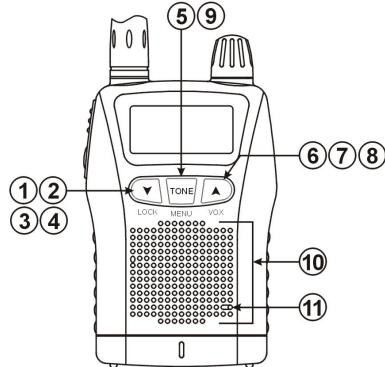

1) Lock

This feature allows the user to lock the operation of each function button on the front panel.

- To Activate : ① Turn the power off.
② Press the Lock button and then turn the power on
③ The “” icon will appear on the LCD to indicate that this feature is currently activated.
- To De-Activate : Repeat “To Activate” process. The “” icon will disappear on the LCD.

2) Channel Down(▼)

Press the Down(▼) button to change the radio to operate on a lower channel number.

3) Down(▼) Scan

This feature allows the user to call all 14 FRS channels for

activity. To start Down(▼) scanning, press channel Down(▼) button over 2 seconds.

The radio will be stop on any busy channel until the preset Scan delay time expires, then revert to scanning. The user can cancel scanning by pressing the "PTT" while the radio stops at a busy channel, and communicate with other users using that channel. To activate Up(▲) scanning, press Up(▲) channel button during down(▼) scanning.

4) Melody Call Feature

The user can transmit two melody tones provided in the radio to indicate its identify test audio performance of the radio.

To operate, simply press "▼(or ▲)" button while holding down the "PTT"

NOTE : FCC restrict the transmission of audible tones to less than 15 seconds.

5) Tone On/Off

Press the "TONE" button while in the receiving mode to toggle the Tone Squelch ON and OFF.
"TONE" icon will appear on the LCD when Tone Squelch is switched ON.

- To De-Activate : Press "TONE" button one more time. The "TONE" icon will disappear on the LCD.

NOTE : In Tone Squelch operation, the loudspeaker of the receiver will only become active while the received signal has the same CTCSS code as the one selected in the RX CTCSS Tone setting menu. Although you could not hear interference or transmissions from other users, they could still exist and may reduce your communication range. It is a good practice to monitor the channel press the "LAMP" button over 2 seconds, to ensure that it is free of interference before you choose it for communications.
Transmission in CTCSS is not private and is subject

to monitoring by other users.

6) Channel Up(▲)

Press the Up(▲) button to move to a higher Channel.

7) Up(▲) Scan

This feature allows the user to call all 14 FRS channels for activity. To start Up(▲) scanning, press channel Up(▲) button over 2 seconds. The radio will be stop on any busy channel until the preset Scan delay time expires, then revert to scanning. The user can cancel scanning by pressing the "PTT" while the radio stops at a busy channel, and communicate with other users using that channel. To activate Down(▼) scanning, press Down(▼) channel button during Up(▲) scanning.

8) VOX

This feature allows the user to transmit the voice without pressing PTT button. In VOX mode, the transmitting will be operated automatically when the signal is input to microphone. If there is no signal to be input, the radio will stay in the receiving mode.

- To Activate : ① Turn the power off
② Press Channel Up(▲) button and then turn the power on
③ VOX “” will appear on the LCD.
- To De-Activate : Turn the power off and on.

9) Duplex function

This function is to separate transmission channel and receiving channel of radio

- To Activate : ① Turn the power off
② Turn the power on while pressing Channel Up(▲) button and Channel Down(▼) button
- To De-Activate : Turn the power off and on.

NOTE : Refer to page 20 about transmission setting.

10) Menu

Will be explained in Option Setting mode

11) Loudspeaker

High quality impact resistant output loudspeaker, which provides clear, high volume reception.

12) Internal Microphone

The internal microphone is a front mounted, electrostatic condenser microphone which provides clear high quality audio transmission. For best results, hold the radio 2-4 inches from your mouth and speak in a normal voice.

FRS CHANNEL FREQUENCY TABLE

- Display of channel



NO.	Freq.(MHz)	NO.	Freq.(MHz)
1	462.5625	8	467.5625
2	462.5875	9	467.5875
3	462.6125	10	467.6125
4	462.6375	11	467.6375
5	462.6625	12	467.6625
6	462.6875	13	467.6875
7	462.7125	14	467.7125

CTCSS

The Continuous Tone Code System Squelch System (CTCSS) is a system to avoid interfering signals on the same channel. By selecting and enabling a code (or tone), only the proper received signal will be enabled. The EH-465 Digital can use the same code for transmit and receive (Common Code).

- Display of CTCSS RX/TX Common Tone Setting Mode



In the above condition, press the "TONE" button over 2 seconds. CTCSS Tone Code will be blanking.
 Press the "▲ or ▼" button to change the TX/RX Tone setting.
 Press "PTT or TONE" button to store the selected CTCSS code.

NO.	Freq.(Hz)	NO.	Freq.(Hz)	NO.	Freq.(Hz)
1	67.0	14	107.2	27	167.9
2	71.9	15	110.9	28	173.8
3	74.4	16	114.8	29	179.9
4	77.0	17	118.8	30	186.2
5	79.7	18	123.0	31	192.8
6	82.5	19	127.3	32	203.5
7	85.4	20	131.8	33	210.7
8	88.5	21	136.5	34	218.1
9	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3
13	103.5	26	162.2		

When the LCD displays the CTCSS code desired, you can change to display another CTCSS Tone setting by pressing "TONE and ▲ or ▼" buttons. After all the settings are completed, press "PTT or TONE" button to store your selections. The radio will revert to normal operation. You can then activate Tone Squelch operation by pressing "TONE".

OPTION SETTING MODE

The following procedure allows the user to access optional feature settings. To enter option setting mode, first turn off the radio, then press and hold "TONE" button while turning on the radio.

NOTE : While you are in the option setting mode :

- A. If you press "TONE" button, the next option setting mode will appear on the LCD.
- B. If you press "PTT" button, all changed contents will be stored and the radio will return to normal operation mode.

1. Setting of VOX Level(1-6 steps)

► Display of VOX Level



Press ▲ or ▼ button to change the VOX operating level from 1 to 6

2. Setting of VOX Delay time

► Display of VOX Delay Time



This feature allows the user to limit the maximum VOX delay time for each transmission. If the VOX is depressed for a

period exceeding the VOX delay time, the VOX transmitter


will be cut off and the user has to release and press PTT again to transmit.

Press ▲ or ▼ button to change the VOX delay time from 1 to 6

3. Setting of Beep On/Off

This feature gives the user an audible test tone sequence while turning the radio on, and short confirmation or error tones when the user presses a button on the radio (Except for PTT button).

► Display of Beep On/Off

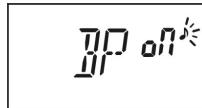

Press ▲ or ▼ button to switch the "Beep" on and off. When the Beep is on, the beep icon "♪" is on the LCD. The feature is preset "ON" at the factory. Confirmation tone is a high pitch tone indicating that the button selection is accepted.

4. Setting of Roger Beep On/Off

This feature allows the user to finish the transmitting and the Radio will be in the receiving mode.

When the Roger Beep is on, the Roger Beep icon "♥" is on the LCD.

► Display of Beep On/Off




Press ▲ or ▼ button to switch the "Roger Beep" on and off.

The feature is preset "ON" at the factory.

5. Setting of Power Save Mode

This feature enables power save circuit in the radio to reduce power consumption and increase the useful life of your battery significantly in standby mode. The feature is preset "ON" at the factory.

► Display of Power Save On/Off Setting Mode

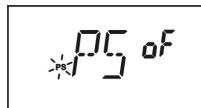


Press ▲ or ▼ button to toggle power save On and Off. The "PS" icon on the LCD will appear when power save option is On. The icon will flash when the power save circuit is in operation during standby mode.


6. Setting of Busy Lock On/Off

This allows the user to disable the transmitter while receiving a message from others. This will avoid interference on the radio channel.

► Display of Busy Channel Lock Out Setting Mode

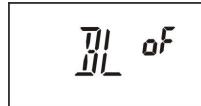

Press ▲ or ▼ button to toggle Busy Channel Lock Out option between On and Off.

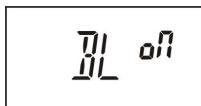

7. Setting of Transmission Channel

This setting is to select transmission channel of radio



- 1) Press and hold the "MENU" button then turn the power on.
- 2) Select the "DP-01" by pressing the menu button.
- 3) By using the "▲ or ▼" button, select duplex Channel.
(EX:DP-05)
- 4) By using the PTT button, fix the duplex channel. The LCD will show normal receiving mode.
- 5) Turn the power on.
- 6) Press and hold "▲ and ▼" button simultaneously and then turn the power on.
- 7) If you Press the PTT button, the set is operation with duplex channel with selected duplex receiving channel. (Channel 5)

Memorize Setting


- 1) If you turn the power off or remove the batteries from the set, the selected duplex channel is remembered as it is.
- 2) If you want to use the selected duplex channel once again after power off, press and hold "▲ or ▼" button simultaneously and then turn the power on.
- 3) If you just turn the power off in duplex mode and turn on the power, the duplex function is released same as VOX function.

NOTE : This setting is only for duplex function(on page 13)

BATTERY INSTALLATION INSTRUCTIONS

1. Turn belt clip to right(or left) direction. (1)
2. Slide open the battery cover on the back of the radio towards the indicated direction. (2)
3. Install 4 AAA Alkaline batteries (or rechargeable battery pack). If using individual batteries, place into the tray in the indicated arrangement. Place tray inside battery well (3). Please note the polarity of the batteries.
4. Put the battery cover back on the radio. Press and slide to close. (4)
5. Press the battery open button upward to lock battery case.

If you have installed rechargeable "AAA" size batteries, or used the Ni-Mh rechargeable batteries, you can use the optional DC wall charge adapter, or optional desktop charger to charge the batteries.

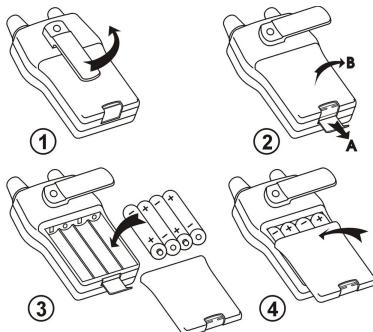

NOTE : Alkaline RENEWABLE batteries are NOT regular rechargeable batteries. They require a special battery charger to recharge.

TO RECEIVE

If you have just transmitted, release the "PTT" button. If you have not transmitted, leave the radio on to receive selected channel.

The radio will unmute upon receiving a signal. The **BUSY** icon will appear on the LCD.

When the radio is operated with CTCSS Tone Squelch, and the radio receives a signal with correct CTCSS code, the **CALL** icon will appear on the LCD display.

TO TRANSMIT

Press and Hold the "PTT" button to transmit.

If Busy Channel Lock Out Option is on and the radio is in receiving mode, "**BUSY**" will blink on the LCD and the audible alarm (error beep tone) is telling you the radio will stay in receiving mode and you will not be able to transmit. Press "TONE" to cancel privacy codes on that channel.

NOTE : Please refer to the different sections in this manual for detailed operational procedures.

INITIALIZATION

Pressing and holding the “PTT” while turning the power on will put the radio into initialization mode. The radio will be reset to original factory settings. This feature is useful when you have mis-programmed the radio and the radio is not operating normally.

RANGE

The maycom EH-465 Digital has an effective range of about two miles in open terrain. Buildings, hills, trees and other objects can reduce the effective range of transmission.

EASY AND SAFE COMMUNICATIONS

The EH-465 Digital can make communications with family and friends easy and safe when :

- You communicate with fellow hikers and bikers.
- You keep track of children in a shopping mall or at a concert.
- Communicate between floors or rooms in your own home.
- Talk to neighbors or friends.
- Talk to traveling friends in another car.

SPECIFICATION

1. General

Channels ----- 14
Frequency Range ----- 462.5625 to 462.7125 MHz
467.5625 to 467.7125 MHz
Frequency Control ----- Phase Lock Loop (PLL)
Synthesizer
Frequency Stability ----- +/- 2.5 ppm
Operating Temperature ----- -20°C to +60°C
(-22°F to +140°F)
Power Source ----- DC 6.0V
Impedance ----- 50 ohm
Dimensions ----- 55(W) x 26(H) x 83.2(D) (mm)
Weight ----- 115g (without battery)

2. Transmit

Power Output ----- 500mW (ERP)
Frequency Modulation ----- Narrow Band FM @ 2.5 KHz
deviation
Current Drain ----- 600mA @ full power
Distortion ----- 5 % maximum
S/N Ratio ----- 40 dB

3. Receive

Circuit Type ----- Super Heterodyne-Dual
Conversion
IF Frequency ----- First IF : 21.7 MHz
Second IF : 450 KHz
Audio output ----- 120mW
Sensitivity ----- 0.25 uV for 12 dB SINAD
Selectivity ----- 50 dB Min

TROUBLESHOOTING

1. The radio won't receive :

If "TONE" is lighted on the display, press "TONE" to cancel privacy codes on that channel.

2. "PS" is flashing :

Power save mode is turned on to save battery power.

3. The radio is locked up :

Turn the radio off and turn back on.



Room 1901, 19/F., Paul Y Centre 51 Hung To Road
Tel : (852)2368 8130 D/Fax : (852)2311 6918
<http://www.maycomhk.com>

Printed in Korea